


LOADSHARE[®]

KITS CATALOGUE 2025

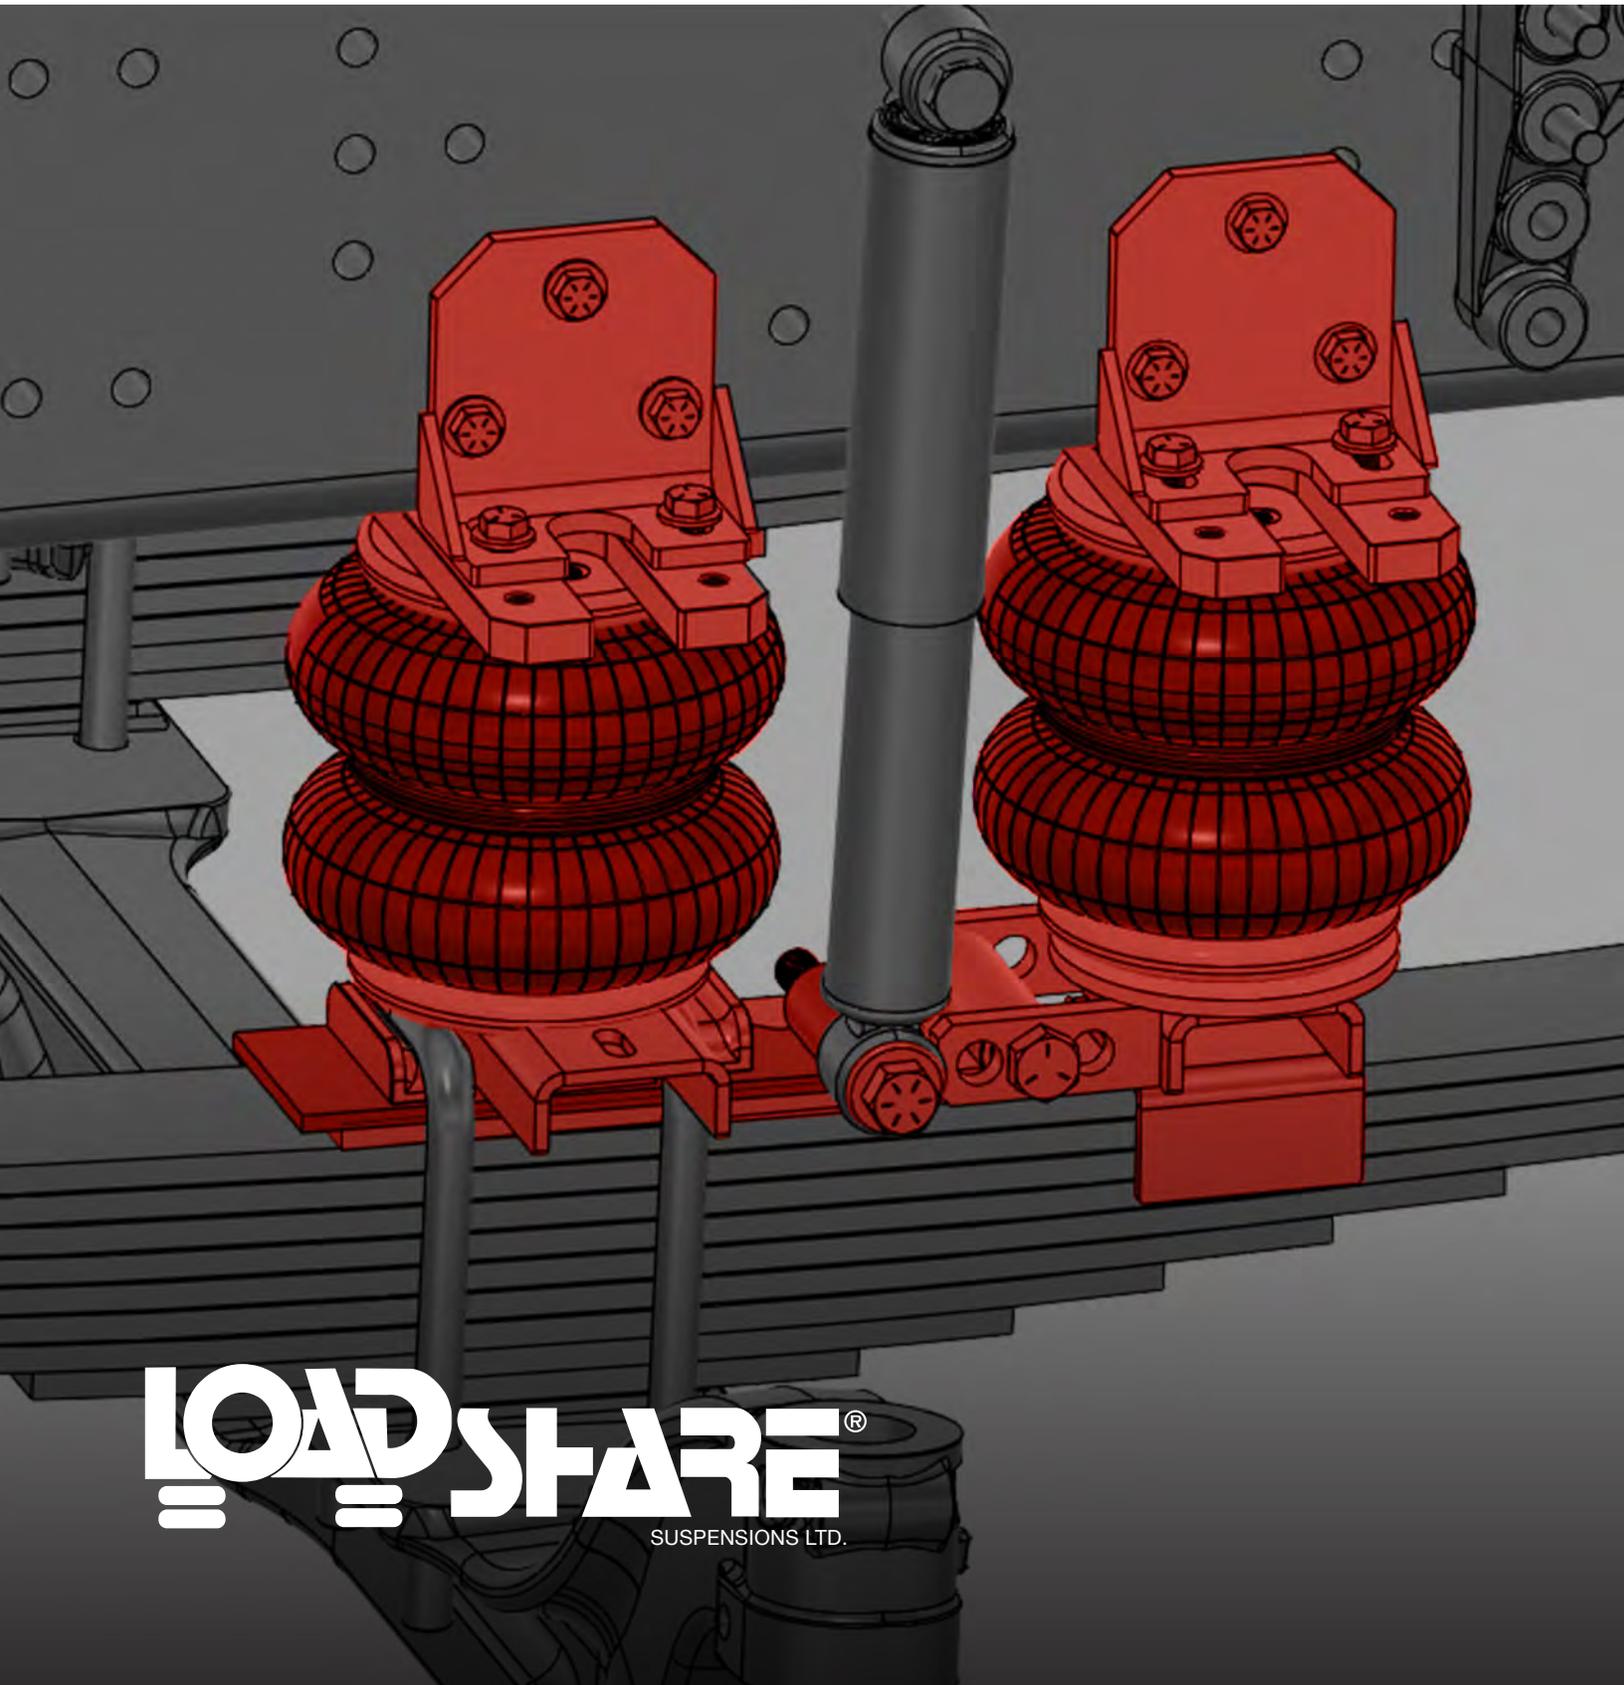

LOADSHARE[®]
SUSPENSIONS LTD.

CUT MAINTENANCE COSTS NOW!

Get increased steering stability and improved ride quality from the trucks you own!



RIDE BETTER. DRIVE LONGER. COUNT ON LOADSHARE.

From Innovation to Installation

Since 1989, Loadshare Suspensions Ltd. has led the charge in redefining ride control across North America's most demanding fleets. With our trademarked Loadshare® kits and proprietary air spring technology, we've turned spring sag into a solvable science—one that now supports over **95% of heavy-duty trucks on the road today.**

Now, we're proud to present our complete line of suspension solutions. Whether you're managing front spring fatigue, tackling under-axle obstructions, or optimizing rear-end performance on straight trucks, Loadshare® kits deliver proven results, one axle at a time.



Find your
kit today.

WHAT DRIVES US

Reliability

Our customers count on dependable solutions. That's why every kit we produce is engineered to perform—and built to last.

Responsiveness

We listen. We adapt. We go the extra mile to support operators facing real-world challenges, whether they're in construction zones or on cross-country hauls.

Integrity

Since 1989, we've earned trust through transparency and performance. We don't cut corners—ever.


Customer Dedication

We believe every client deserves to be treated like royalty. From hands-on support to personalized solutions, Loadshare's commitment to the people behind the wheel is unwavering. If you've ever worked with Loadshare, you've seen it firsthand.

Innovation With Purpose

From our first kit design to today's full-spectrum solutions, we innovate where it counts most: ride quality, stability, and long-term value.

 **PROUDLY BUILT IN CANADA SINCE 1989**

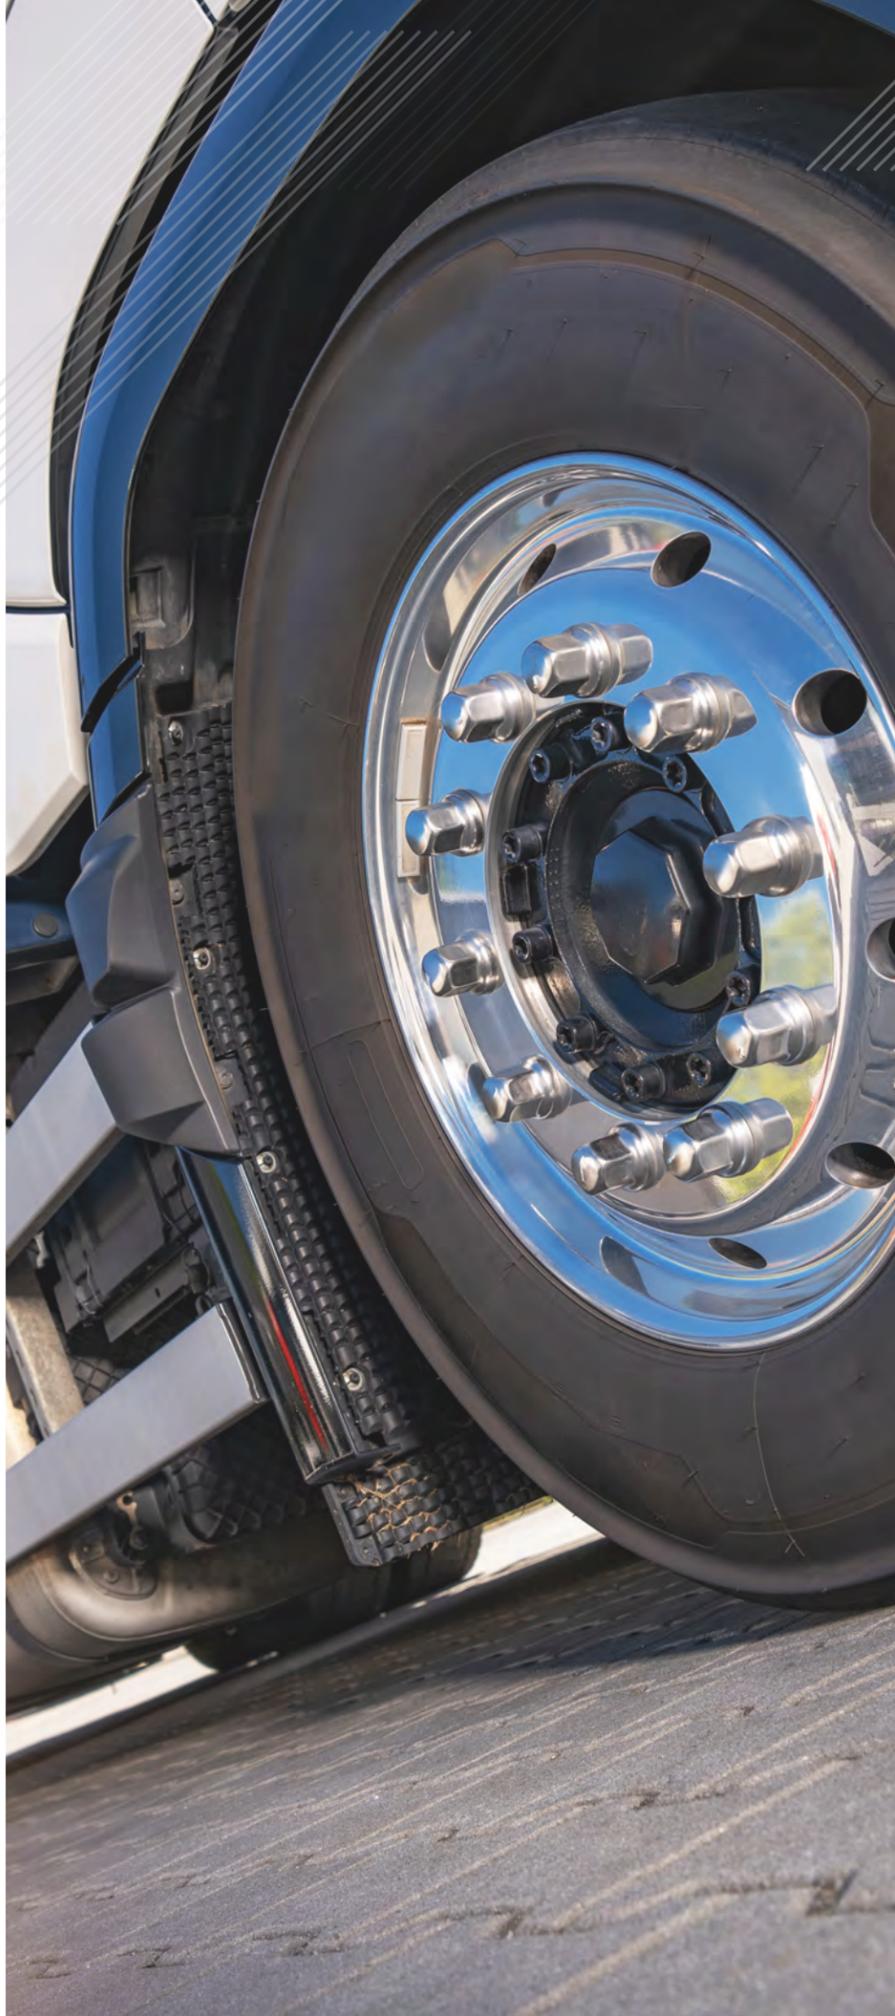

LOADSHARE KIT OPTIONS

CLASSIC Kits	6
SQUARE TOP Kit Series	
7" Bag Kits	9
9" Bag Kits	10
REAR-OFFSET Kit Series	
7" Bag Kits	13
9" Bag Kits	14
ROUND-TOP Kit Series	
7" Bag Kits	17
9" Bag Kits	18
DUAL BAG Kit Series	
7" Bag Kits	21
9" Bag Kits	22
LOW PROFILE Kit Series	25
SHOCK Kit Series	27
REAR AIR-RIDE Kit Series	29
FAQ	30

CLASSIC KIT
SQUARE-TOP




Loadshare® Classic Casted Square-Top Kit

This is the kit that started it all. Featuring a casted square-top bracket, the Loadshare® Classic Kit has earned its stripes in the harshest operating environments across North America. Known for its bulletproof design and time-tested durability, this configuration is trusted by seasoned operators and fleet managers alike. If you've heard of Loadshare®, chances are you've heard of this kit.

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS10083	Standard	4"	Double	6-5/8"



CLASSIC KIT
ROUND-TOP

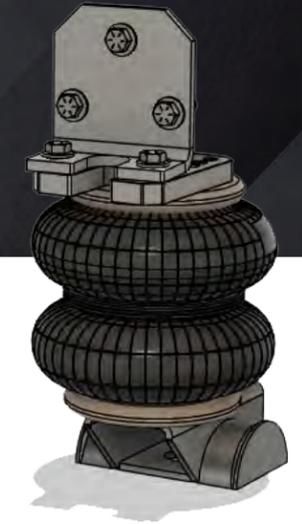

Loadshare® Classic Round-Top Kit

A trailblazer in Loadshare®'s product history, this round-top bracket kit represents one of our earliest solutions—designed specifically for standard front axle U-bolt configurations. It's the go-to choice for fleets looking to upgrade performance without breaking the budget. With its entry-level cost point, this kit offers proven Loadshare® support and reliability, making it ideal for the most common front-end setups across North American vocational trucks.


KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS10191	Standard	4"	Double	7-5/8"



SQUARE-TOP

Loadshare® Square-Top Kit Series

Built for trucks outfitted with square-top U-bolts, this Loadshare® Kit Series delivers versatile suspension solutions for narrow, standard, and wide U-bolt spacing. Every kit is engineered for precise fitment and includes both single-convoluted and double-convoluted air bag configurations. For applications with reduced height clearance, our single-convoluted kits offer a compact yet durable solution. Additionally, we include 7-inch double-convoluted air bag kits, specifically designed to perform in environments with limited radial clearance—ensuring improved stability and optimized ride control across demanding applications.

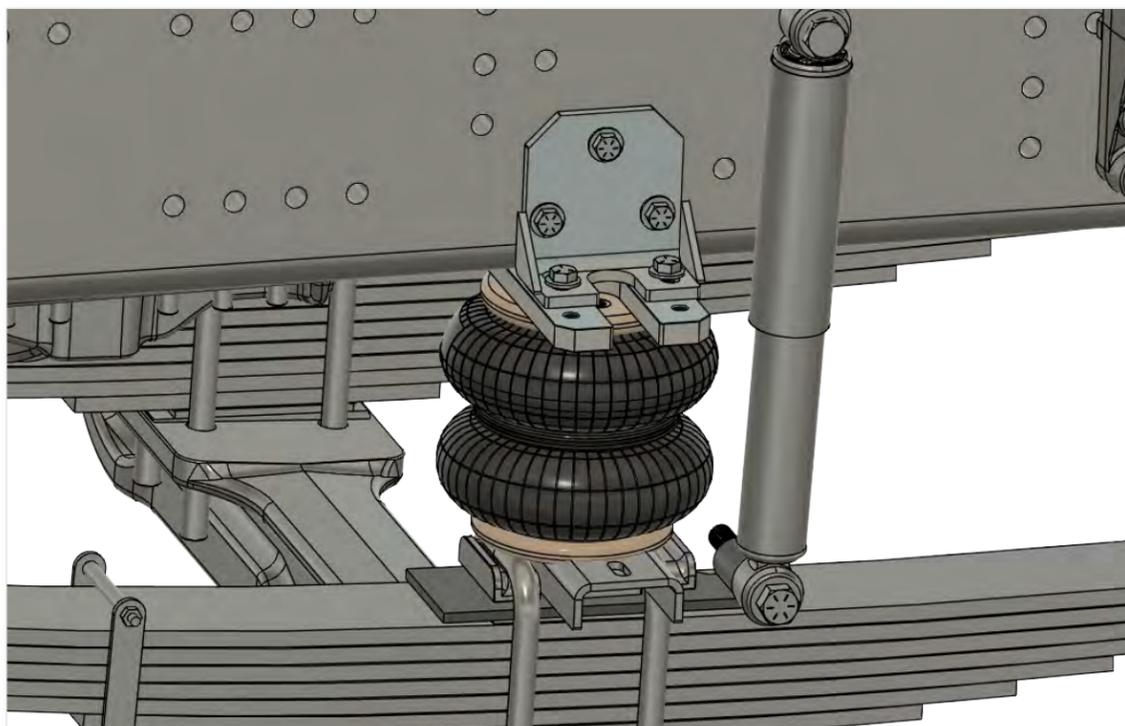

7" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS57105	Standard (4-1/2 to 4-3/4)	4"	Double	4-7/8"
HS57106	Standard	3.5"	Double	4-7/8"
HS57107	Standard	3"	Double	4-7/8"
HS57108	Narrow (4 to 4-1/2)	4"	Double	4-7/8"
HS57109	Narrow	3.5"	Double	4-7/8"
HS57110	Narrow	3"	Double	4-7/8"
HS57305	Wide (4-3/4 to 7")	4"	Double	4-7/8"
HS57306	Wide	3.5"	Double	4-7/8"
HS57307	Wide	3"	Double	4-7/8"
HS57307	Wide	3"	Double	4-7/8"



7" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS67105	Standard (4-1/2 to 4-3/4)	4"	Double	4-7/8"
HS67106	Standard	3.5"	Double	4-7/8"
HS67107	Standard	3"	Double	4-7/8"
HS67108	Narrow (4 to 4-1/2)	4"	Double	4-7/8"
HS67109	Narrow	3.5"	Double	4-7/8"
HS67110	Narrow	3"	Double	4-7/8"
HS67305	Wide (4-3/4 to 7")	4"	Double	4-7/8"
HS67306	Wide	3.5"	Double	4-7/8"
HS67307	Wide	3"	Double	4-7/8"



9" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS59105	Standard (4-1/2 to 4-3/4)	4"	Double	6-5/8"
HS59106	Standard	3.5"	Double	6-5/8"
HS59107	Standard	3"	Double	6-5/8"
HS59108	Narrow (4 to 4-1/2)	4"	Double	6-5/8"
HS59109	Narrow	3.5"	Double	6-5/8"
HS59110	Narrow	3"	Double	6-5/8"
HS59205	Standard	4"	Single	5-5/8"
HS59206	Standard	3.5"	Single	5-5/8"
HS59207	Standard	3"	Single	5-5/8"
HS59208	Narrow	4"	Single	5-5/8"
HS59209	Narrow	3.5"	Single	5-5/8"
HS59210	Narrow	3"	Single	5-5/8"
HS59305	Wide (4-3/4 to 7")	4"	Double	6-5/8"
HS59306	Wide	3.5"	Double	6-5/8"
HS59307	Wide	3"	Double	6-5/8"
HS59405	Wide	4"	Single	5-5/8"
HS59406	Wide	3.5"	Single	5-5/8"
HS59407	Wide	3"	Single	5-5/8"



Find your kit today.



9" Bag Single Side Kits



KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS69105	Standard (4-1/2 to 4-3/4)	4"	Double	6-5/8"
HS69106	Standard	3.5"	Double	6-5/8"
HS69107	Standard	3"	Double	6-5/8"
HS69108	Narrow (4 to 4-1/2)	4"	Double	6-5/8"
HS69109	Narrow	3.5"	Double	6-5/8"
HS69110	Narrow	3"	Double	6-5/8"
HS69205	Standard	4"	Single	5-5/8"
HS69206	Standard	3.5"	Single	5-5/8"
HS69207	Standard	3"	Single	5-5/8"
HS69208	Narrow	4"	Single	5-5/8"
HS69209	Narrow	3.5"	Single	5-5/8"
HS69210	Narrow	3"	Single	5-5/8"
HS69305	Wide (4-3/4 to 7")	4"	Double	6-5/8"
HS69306	Wide	3.5"	Double	6-5/8"
HS69307	Wide	3"	Double	6-5/8"
HS69405	Wide	4"	Single	5-5/8"
HS69406	Wide	3.5"	Single	5-5/8"
HS69407	Wide	3"	Single	5-5/8"



REAR-OFFSET

Loadshare® Rear Offset Kit Series

Designed for applications where obstructions above the axle prevent direct mounting, the Loadshare® Rear Offset Kit Series provides the ideal solution by repositioning the air bag rearward from the axle. This series includes a variety of air spring configurations, featuring both **7-inch** and **9-inch double-convoluted** options, as well as **9-inch single-convoluted kits**. Whether you're dealing with tight radial or vertical clearances, these kits deliver reliable suspension support without compromising on performance. Built for durability and engineered for fitment flexibility, Rear Offset Kits help maintain ride comfort and load stability—even in the most restrictive chassis environments.

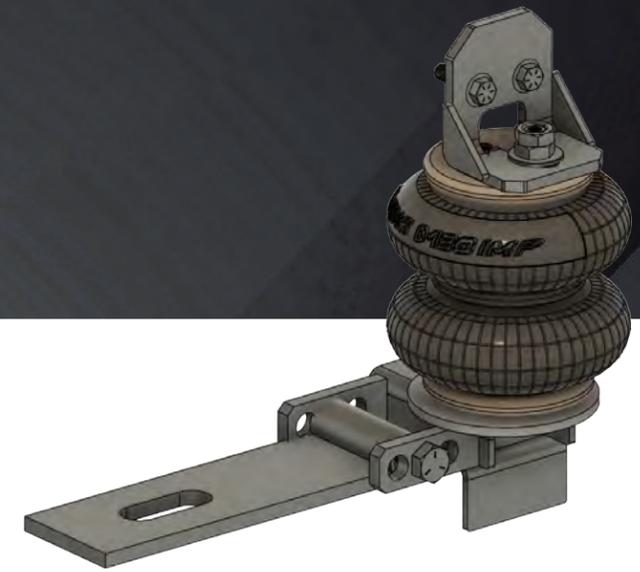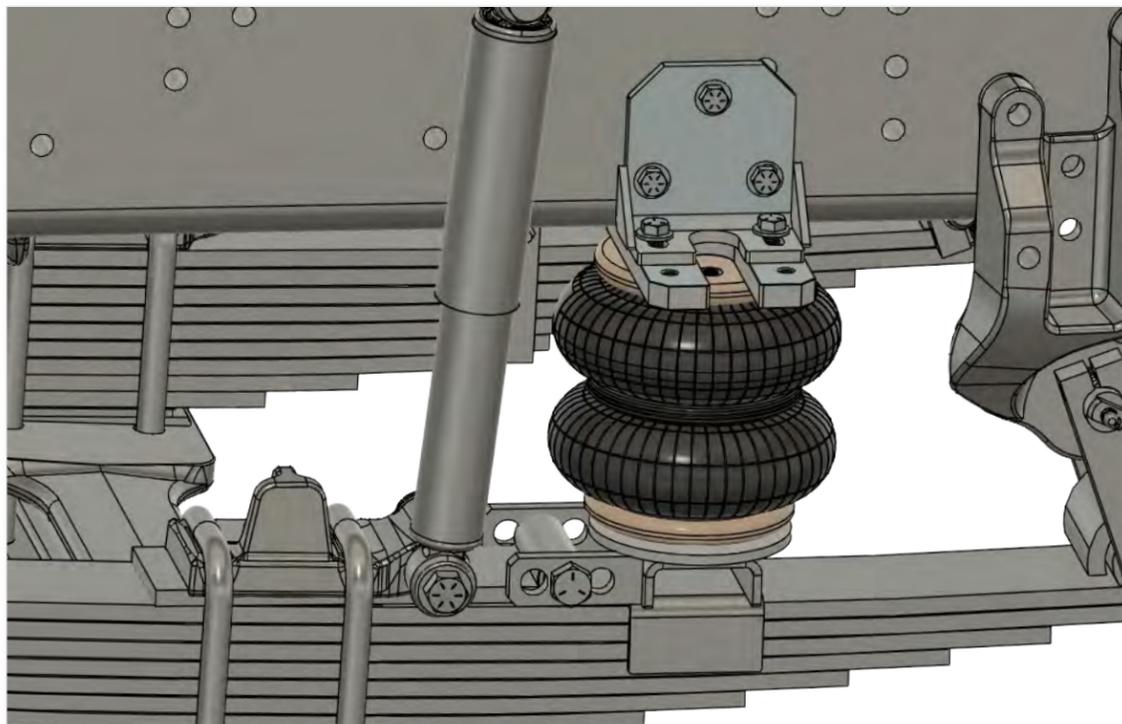

7" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS77105	N/A	4"	Double	4-7/8"
HS77106	N/A	3.5"	Double	4-7/8"
HS77107	N/A	3"	Double	4-7/8"

7" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS87105	N/A	4"	Double	4-7/8"
HS87106	N/A	3.5"	Double	4-7/8"
HS87107	N/A	3"	Double	4-7/8"



9" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS79105	N/A	4"	Double	6-5/8"
HS79106	N/A	3.5"	Double	6-5/8"
HS79107	N/A	3"	Double	6-5/8"
HS79205	N/A	4"	Single	5-5/8"
HS79206	N/A	3.5"	Single	5-5/8"
HS79207	N/A	3"	Single	5-5/8"




Find your kit today.



9" Bag Single Side Kits


KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS89105	N/A	4"	Double	6-5/8"
HS89106	N/A	3.5"	Double	6-5/8"
HS89107	N/A	3"	Double	6-5/8"
HS89205	N/A	4"	Single	5-5/8"
HS89206	N/A	3.5"	Single	5-5/8"
HS89207	N/A	3"	Single	5-5/8"

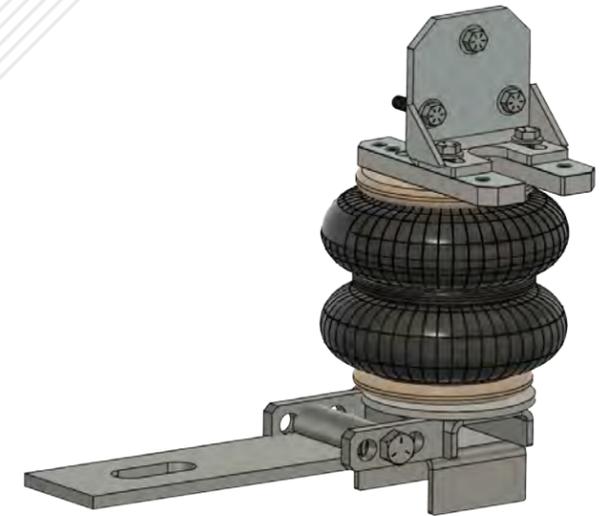

ROUND-TOP

Loadshare® Round-Top Kit Series

Purpose-built for trucks equipped with round-top U-bolts, this Loadshare® Kit Series delivers adaptive suspension solutions for a variety of U-bolt spacing requirements—narrow, standard, and wide. It includes both single-convoluted and double-convoluted air bag configurations, ensuring compatibility with diverse installation environments. Our single-convoluted kits offer a streamlined fit for height-restricted setups, while the 7-inch double-convoluted air bag kits are engineered to provide reliable performance in applications with limited radial clearance. Whether you're upgrading ride control or fine-tuning your load support, this series combines resilience and precision for dependable results.

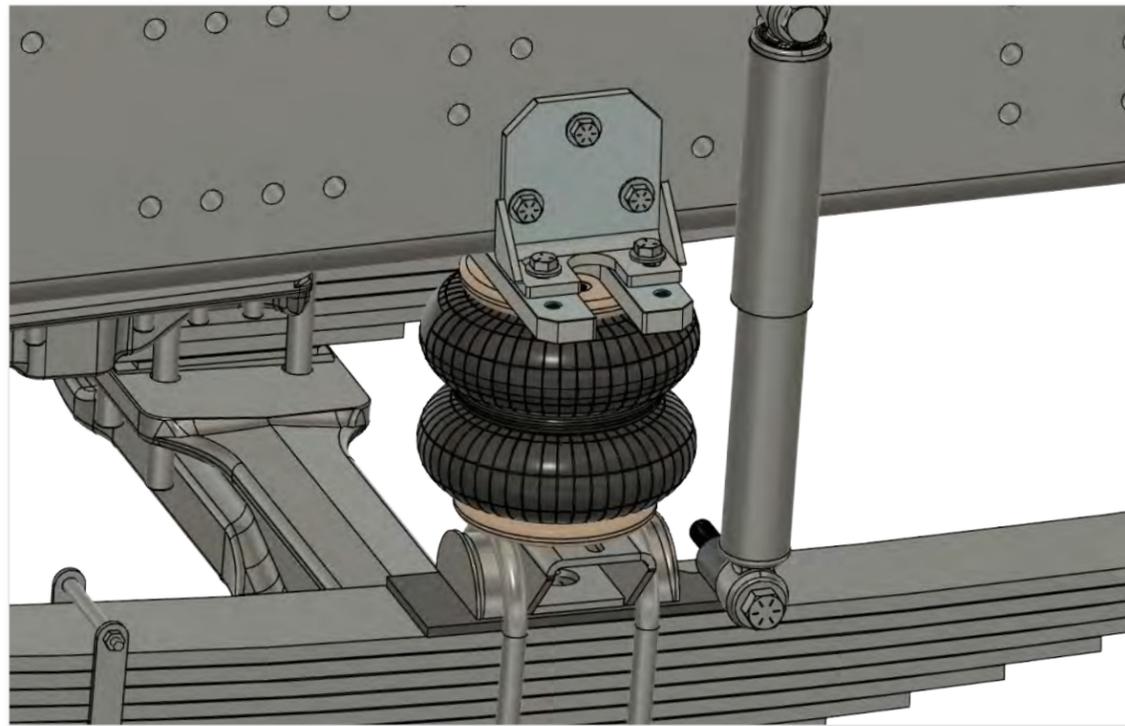

7" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS97105	Standard (4-1/2 to 4-3/4)	4"	Double	5-7/8"
HS97106	Standard	3.5"	Double	5-7/8"
HS97107	Standard	3"	Double	5-7/8"
HS97108	Narrow (4 to 4-1/2)	4"	Double	5-7/8"
HS97109	Narrow	3.5"	Double	5-7/8"
HS97110	Narrow	3"	Double	5-7/8"
HS97305	Wide (4-3/4 to 7")	4"	Double	5-7/8"
HS97306	Wide	3.5"	Double	5-7/8"
HS97307	Wide	3"	Double	5-7/8"



7" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS107105	Standard (4-1/2 to 4-3/4)	4"	Double	5-7/8"
HS107106	Standard	3.5"	Double	5-7/8"
HS107107	Standard	3"	Double	5-7/8"
HS107108	Narrow (4 to 4-1/2)	4"	Double	5-7/8"
HS107109	Narrow	3.5"	Double	5-7/8"
HS107110	Narrow	3"	Double	5-7/8"
HS107305	Wide (4-3/4 to 7")	4"	Double	5-7/8"
HS107306	Wide	3.5"	Double	5-7/8"
HS107307	Wide	3"	Double	5-7/8"



9" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS99105	Standard (4-1/2 to 4-3/4)	4"	Double	7-5/8"
HS99106	Standard	3.5"	Double	7-5/8"
HS99107	Standard	3"	Double	7-5/8"
HS99108	Narrow (4 to 4-1/2)	4"	Double	7-5/8"
HS99109	Narrow	3.5"	Double	7-5/8"
HS99110	Narrow	3"	Double	7-5/8"
HS99205	Standard	4"	Single	6-5/8"
HS99206	Standard	3.5"	Single	6-5/8"
HS99207	Standard	3"	Single	6-5/8"
HS99208	Narrow	4"	Single	6-5/8"
HS99209	Narrow	3.5"	Single	6-5/8"
HS99210	Narrow	3"	Single	6-5/8"
HS99305	Wide (4-3/4 to 7")	4"	Double	7-5/8"
HS99306	Wide	3.5"	Double	7-5/8"
HS99307	Wide	3"	Double	7-5/8"
HS99405	Wide	4"	Single	6-5/8"
HS99406	Wide	3.5"	Single	6-5/8"
HS99407	Wide	3"	Single	6-5/8"



Find your kit today.




9" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS109105	Standard (4-1/2 to 4-3/4)	4"	Double	7-5/8"
HS109106	Standard	3.5"	Double	7-5/8"
HS109107	Standard	3"	Double	7-5/8"
HS109108	Narrow (4 to 4-1/2)	4"	Double	7-5/8"
HS109109	Narrow	3.5"	Double	7-5/8"
HS109110	Narrow	3"	Double	7-5/8"
HS109205	Standard	4"	Single	6-5/8"
HS109206	Standard	3.5"	Single	6-5/8"
HS109207	Standard	3"	Single	6-5/8"
HS109208	Narrow	4"	Single	6-5/8"
HS109209	Narrow	3.5"	Single	6-5/8"
HS109210	Narrow	3"	Single	6-5/8"
HS109305	Wide (4-3/4 to 7")	4"	Double	7-5/8"
HS109306	Wide	3.5"	Double	7-5/8"
HS109307	Wide	3"	Double	7-5/8"
HS109405	Wide	4"	Single	6-5/8"
HS109406	Wide	3.5"	Single	6-5/8"
HS109407	Wide	3"	Single	6-5/8"




DUAL BAG

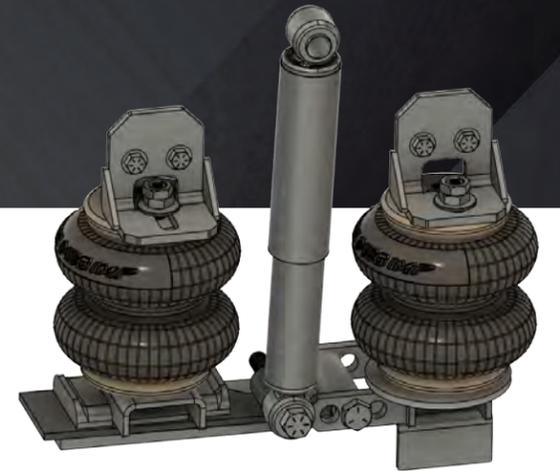

Loadshare® Dual Air Bag Premium Kit

For operators who demand peak suspension performance, the Loadshare® Premium Kit brings together the best of both worlds—featuring a square-top over-axle configuration combined with a rear-offset kit, this setup equips each side with two airbags for superior ride control. Included in this powerhouse system are all three of our trusted air spring configurations: 7-inch double-convoluted, 9-inch double-convoluted, and 9-inch single-convoluted air bags. The rear-offset component ensures compatibility in installations with obstructions above the axle, while the dual-bag layout delivers unmatched stability, load handling, and comfort. Though not suitable for every chassis and sometimes a bigger investment, this kit is a true standout when installed—built for professionals who want us to go the second mile, so their truck can too.

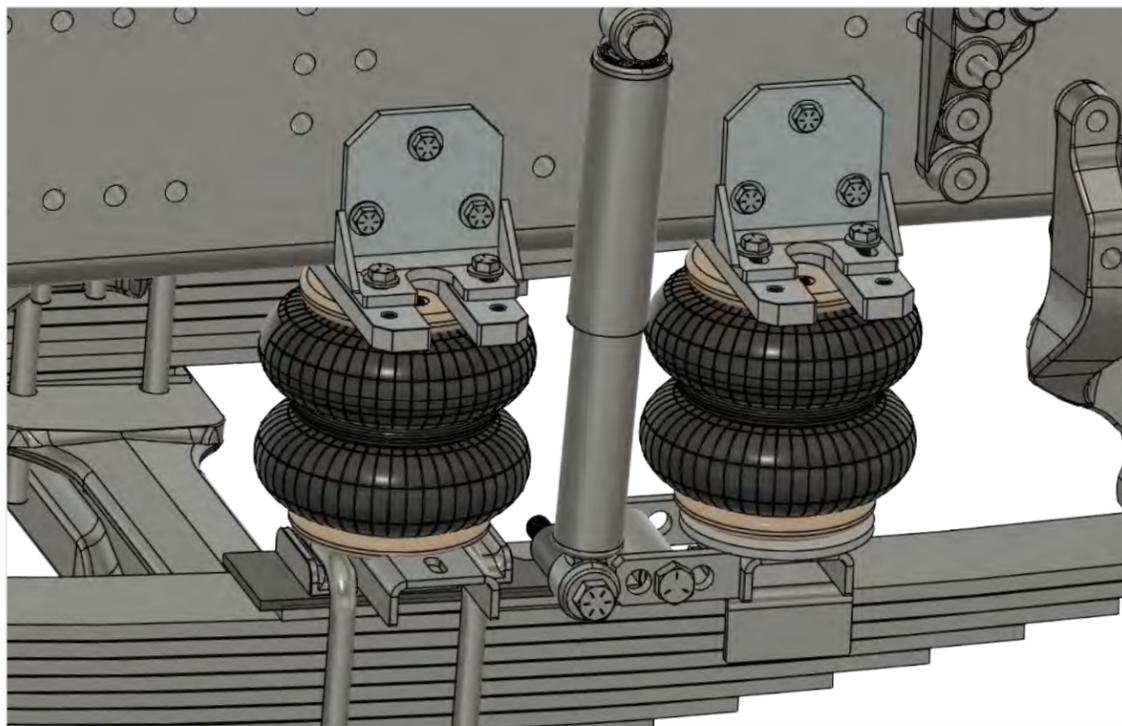

7" Bag Both Side Kits


KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS257105	Standard (4-1/2 to 4-3/4)	4"	Double	4-7/8"
HS257106	Standard	3.5"	Double	4-7/8"
HS257107	Standard	3"	Double	4-7/8"
HS257108	Narrow (4 to 4-1/2)	4"	Double	4-7/8"
HS257109	Narrow	3.5"	Double	4-7/8"
HS257110	Narrow	3"	Double	4-7/8"
HS257305	Wide (4-3/4 to 7")	4"	Double	4-7/8"
HS257306	Wide	3.5"	Double	4-7/8"
HS257307	Wide	3"	Double	4-7/8"

7" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS267105	Standard (4-1/2 to 4-3/4)	4"	Double	4-7/8"
HS267106	Standard	3.5"	Double	4-7/8"
HS267107	Standard	3"	Double	4-7/8"
HS267108	Narrow (4 to 4-1/2)	4"	Double	4-7/8"
HS267109	Narrow	3.5"	Double	4-7/8"
HS267110	Narrow	3"	Double	4-7/8"
HS267305	Wide (4-3/4 to 7")	4"	Double	4-7/8"
HS267306	Wide	3.5"	Double	4-7/8"
HS267307	Wide	3"	Double	4-7/8"

9" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS259105	Standard (4-1/2 to 4-3/4)	4"	Double	6-5/8"
HS259106	Standard	3.5"	Double	6-5/8"
HS259107	Standard	3"	Double	6-5/8"
HS259108	Narrow (4 to 4-1/2)	4"	Double	6-5/8"
HS259109	Narrow	3.5"	Double	6-5/8"
HS259110	Narrow	3"	Double	6-5/8"
HS259205	Standard	4"	Single	5-5/8"
HS259206	Standard	3.5"	Single	5-5/8"
HS259207	Standard	3"	Single	5-5/8"
HS259208	Narrow	4"	Single	5-5/8"
HS259209	Narrow	3.5"	Single	5-5/8"
HS259210	Narrow	3"	Single	5-5/8"
HS259305	Wide (4-3/4 to 7")	4"	Double	6-5/8"
HS259306	Wide	3.5"	Double	6-5/8"
HS259307	Wide	3"	Double	6-5/8"
HS259405	Wide	4"	Single	5-5/8"
HS259406	Wide	3.5"	Single	5-5/8"
HS259407	Wide	3"	Single	5-5/8"

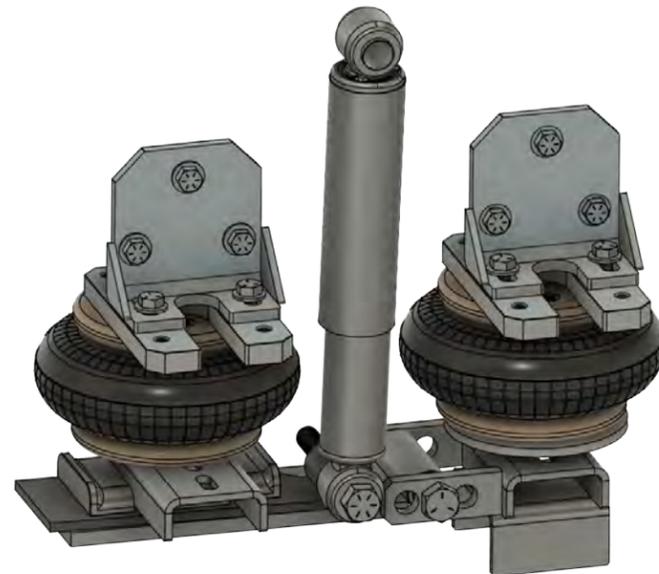

Find your kit today.





9" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS269105	Standard (4-1/2 to 4-3/4)	4"	Double	6-5/8"
HS269106	Standard	3.5"	Double	6-5/8"
HS269107	Standard	3"	Double	6-5/8"
HS269108	Narrow (4 to 4-1/2)	4"	Double	6-5/8"
HS269109	Narrow	3.5"	Double	6-5/8"
HS269110	Narrow	3"	Double	6-5/8"
HS269205	Standard	4"	Single	5-5/8"
HS269206	Standard	3.5"	Single	5-5/8"
HS269207	Standard	3"	Single	5-5/8"
HS269208	Narrow	4"	Single	5-5/8"
HS269209	Narrow	3.5"	Single	5-5/8"
HS269210	Narrow	3"	Single	5-5/8"
HS269305	Wide (4-3/4 to 7")	4"	Double	6-5/8"
HS269306	Wide	3.5"	Double	6-5/8"
HS269307	Wide	3"	Double	6-5/8"
HS269405	Wide	4"	Single	5-5/8"
HS269406	Wide	3.5"	Single	5-5/8"
HS269407	Wide	3"	Single	5-5/8"

LOW PROFILE

Loadshare® Compact Clearance Kit Series

When space is at a premium, the Loadshare® Compact Clearance Kit Series steps in with precision. Designed for trucks facing extreme height or radial clearance limitations, these kits echo the rear-offset concept—but feature a single air spring configuration for maximum fitment flexibility. Available in 7-inch and 9-inch single-convoluted air bags, they're built to squeeze into the tightest setups without sacrificing performance. We've bent over backward engineering this series so your truck doesn't have to—delivering smoother rides, solid support, and real-world dependability in the most unforgiving installation scenarios.

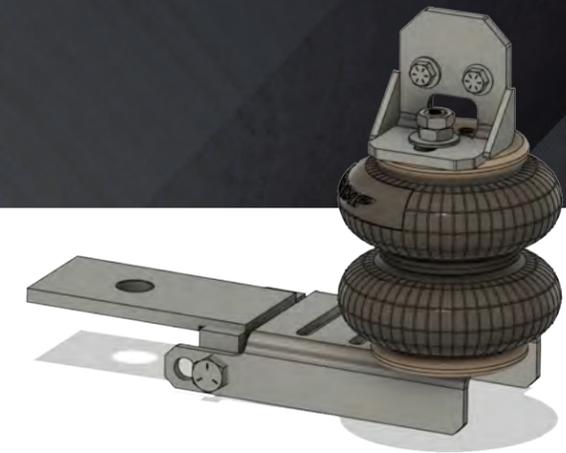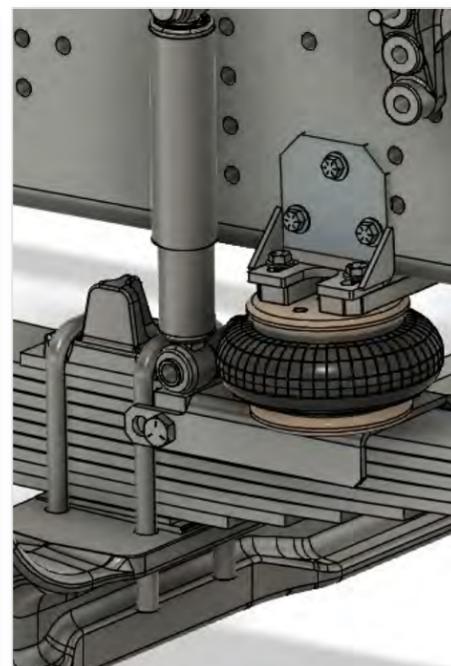

7" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS77305	N/A	4"	Single	3-7/8"
HS77306	N/A	3.5"	Single	3-7/8"
HS77307	N/A	3"	Single	3-7/8"

7" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS87305	N/A	4"	Single	3-7/8"
HS87306	N/A	3.5"	Single	3-7/8"
HS87307	N/A	3"	Single	3-7/8"

9" Bag Both Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS79505	N/A	4"	Single	4-5/8"
HS79505	N/A	3.5"	Single	4-5/8"
HS79505	N/A	3"	Single	4-5/8"

9" Bag Single Side Kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	COLLAPSED KIT HEIGHT
HS89505	N/A	4"	Single	4-5/8"
HS89505	N/A	3.5"	Single	4-5/8"
HS89505	N/A	3"	Single	4-5/8"

THE BENEFITS OF AN AIR HELPER SPRING SYSTEM

Various systems have been tested under the most rugged conditions and in all cases a 100% improvement in vehicle performance was observed. Listed below are several benefits noticed when using the air bag setup.

- Eliminates leaf spring sag
- Keeps the frame level under braking
- Keeps the frame level when weight is shifted
- Keeps the frame level when auxiliary suspensions are raised
- Improves steering characteristics
- Extends the life of steering, spring, and pivot bushing components
- Improves vehicle handling
- Improves weight distribution




Got Questions?

SHOCK KIT



Shock Relocation Kits Built for Smooth Installations

At Loadshare® Suspensions Ltd., we understand that every truck setup is unique. That's why we offer specialized Shock Relocation Kits, designed to reposition the stabilizer arm mount whenever its original placement interferes with Loadshare® kit installation. Engineered for precision and durability, these kits ensure a seamless fit without compromising the performance of your suspension system.

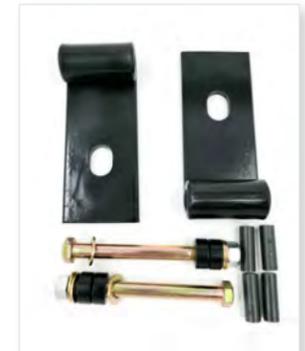

Shock kits

KIT #	U-BOLT SPACING	LEAFSPRING WIDTH	AIRBAG TYPE (CONVOLUTED)	WEIGHT CAPACITY
HS10236-A4	All	4"	All	Heavy Duty (12,000 lb +)
HS10236-A35	All	3.5"	All	Heavy Duty
HS10236-A3	All	3"	All	Heavy Duty
HS10240-A4	All	4"	All	Standard (up to 12,000 lb)
HS10240-A35	All	3.5"	All	Standard
HS10240-A3	All	3"	All	Standard


SHOCK KITS

PROVEN DURABILITY
and straightforward installation
make Loadshare® the smart choice.

REAR AIR-RIDE

Loadshare® Rear Air Ride Series for Straight Trucks

Straight trucks often roll off the line without factory rear air suspension, but they still deserve premium ride quality and load control. That's why we developed the Loadshare® Rear Air Ride Series—built exclusively for rear axle applications, these kits equip two airbags per side to drastically improve stability, ride comfort, and weight distribution. Ideal for trucks facing variable payloads or inconsistent terrain, this series adds a professional-grade upgrade to the rear—complementing front suspension systems and delivering full-vehicle support for everyday performance.

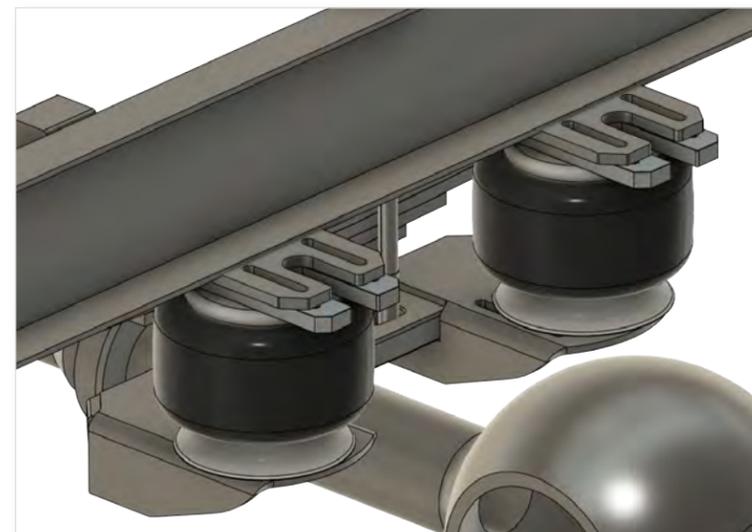

Ask Us About Our
Rear Air Ride Kits

FAQ

We know you want clear, straightforward answers—no fluff.

Here's everything you need to pick, buy, and install the right air suspension kit for your truck.

Where Can I Buy a Loadshare Kit?

We partner with trusted dealers nationwide, so you get expert installation and support.

- Visit loadshare.ca and click [Find a Dealer](#).
- Enter your city or postal code.
- Choose a dealer based on proximity, customer reviews, or service offerings.

Prefer a personal recommendation?

Call us at 519-649-7420 or email info@loadshare.ca. We'll point you to the best local shop.

How Do I Know Which Kit Fits My Truck?

- Go to loadshare.ca/truck-listings/ and search by make, model, and year.
- If your truck isn't listed, head to loadshare.ca/kit-finder.
- Enter specs: U-bolt spacing, U-bolt type, height clearance, etc.
- The Kit Finder will suggest the perfect kit.

Need help?

Our team is available weekdays 9 AM-5 PM EST (and often weekends) to guide you.

7" vs. 9" Bag Kits: Which One Should I Get?

More air equals a smoother ride. Here's the rule of thumb:

- 9" Bag Kit: Best ride comfort and load handling when you have frame clearance.
- 7" Bag Kit: Ideal for tight spaces or special applications.

Use the Kit Finder to check clearance.

Still deciding?

Give us a call to compare specs for your setup.

What's a Rear Offset Kit and Do I Need One?

A Rear Offset Kit lets you mount the air spring away from the axle center when there's no room directly above the axle. You need it if:

- Frame rails, body mounts or other obstructions block direct mounting.
- You're installing dual bags.

Our system flags this automatically, but feel free to ask why we recommend it for your truck.

Single-Bag vs. Dual-Bag Kits: What's the Difference?

- Single-Bag Kit: One air spring per side—excellent performance and comfort.
- Dual-Bag Kit: Two air springs per side—for maximum air volume, stability, and a premium ride.

If you tow heavy loads or crave top-tier ride quality, a Dual-Bag Kit is your go-to.

Can I Lower My Truck with This Kit?

Yes. We offer a dump valve to purge air and restore your previous static ride height. For more dramatic lowering:

- Some owners remove leaf springs.
- We don't officially recommend spring removal—if you choose this route, use a certified mechanic for safety.

Should I Remove Leaf Springs When Installing?

Modifying factory suspension isn't our official advice. However, many owners remove leaves for extra drop and love the result. Always consult a certified mechanic before making that change.

Need More Help?

Visit our website for:

- Step-by-step installation videos.
- On-board air management systems.
- Maintenance tips and leak-check best practices.

Email info@loadshare.ca or chat with us live at loadshare.ca

What Is a Shock Mount Kit?

Also called a Shock Mount Relocation Kit, this adds brackets so your stabilizer arm clears the new air springs. You'll need one if your shock mounts:

- On the factory axle stop (which our kit replaces).
- Somewhere that interferes with the air bag's travel.

The Kit Finder recommends this for you, or send us a pic at info@loadshare.ca and we'll confirm.

WARRANTY

At Loadshare® Suspensions Ltd., exceptional customer service isn't just a promise—it's our guiding principle. We stand firmly behind every Loadshare® kit with a one-year warranty from the date of installation, because we believe in our product's quality and in your peace of mind.





View the online
catalogue.

Head Office in Ontario Canada
519-649-7420 | sales@loadshare.ca | loadshare.ca

LOADSHARE[®]
SUSPENSIONS LTD.